

High Throughput Combinatorial Chemistry Development of Complex Hydrides



Darshan Kundaliya, Xiongfei Shen, Jonathan Melman and Xiao-Dong Xiang

Intematix Corporation

In Association with the DOE/SNL Metal Hydride Center of Excellence

Project ID #STP25

Overview

Project Timeline

- Start date: March 2005
- End date: February 2010
- 40% Percent complete

Barriers

- Slow kinetic reaction
- Thermodynamic stability
- Low reversible storage
- In-situ thin film characterization

Budget

- Total project funding
 - ✓ DOE share: \$720K
 - ✓ Contractor share: \$180K
- Funding received in FY06: \$300K
- Funding for FY07: \$300K

Partners

- HRL
- Sandia National Lab
- Additional MHCoE partner collaborations in future



Overall

- Identify and synthesize novel metal hydride systems using high-throughput combinatorial technique
- Identify catalysts to achieve fast reaction kinetics for metal hydride systems and thus support DOE's 2010 targets for start time (4 s), flow rate (0.02 (g H₂/s)/kW) and refill time (3 min)

2006

- Validate combinatorial nano-synthesis systems for catalyst discovery
- Screen and identify better catalysts for MgH₂ + Si system
- Screen and identify better catalysts for complex LiBH₄ + MgH₂ dehydrogenation and hydrogenation

2007

- Synthesize and characterize novel complex hydride materials in thin films format
- Continue catalyst screening on LiBH₄ + MgH₂ system based on leads obtained in 2006
- Screen catalysts for various other partners/systems (GROUP A and GROUP B of MHCoE)



Accomplishments


- Validation of two combinatorial synthesis techniques
 - Validation of three high throughput screening techniques
 - Catalyst screened: >50 metals and alloys
 - Found better catalyst for MgH_2 + Si dehydrogenation
 - High throughput screening did not identify any effective rehydrogenation catalyst up to reactor's P&T limitations
 - System down-selected due to lack of rehydrogenation
 - High throughput screening enabled a rapid decision on system, enabling focus on newer, possibly regenerable systems
 - A few catalyst leads found for $\text{LiH}+\text{MgB}_2$ system
 - Thin film materials syntheses underway on both known and novel materials
 - Patents filed: 2
-
- Intematix has accomplished validation of its tools for high-throughput combinatorial catalyst screening roughly nine months ahead of schedule



Please see following slides for details



Approach

Methodology used for metal hydride synthesis and combinatorial catalyst screening

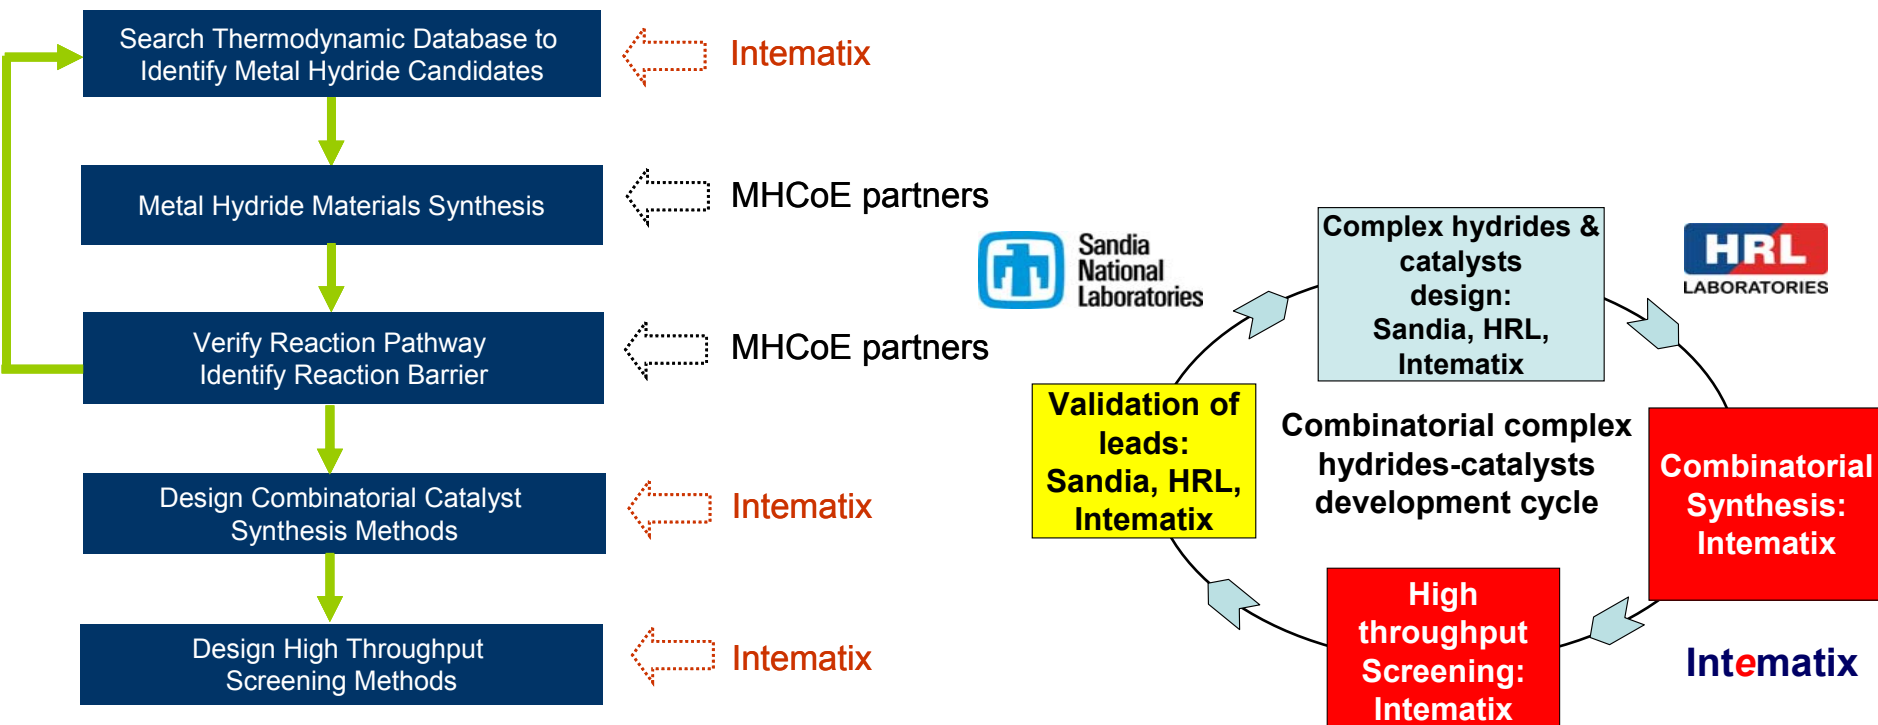

Combinatorial Synthesis Approach-1

Validated Combinatorial Ion Beam Sputtering (CIBS) technique for metal hydride catalyst synthesis

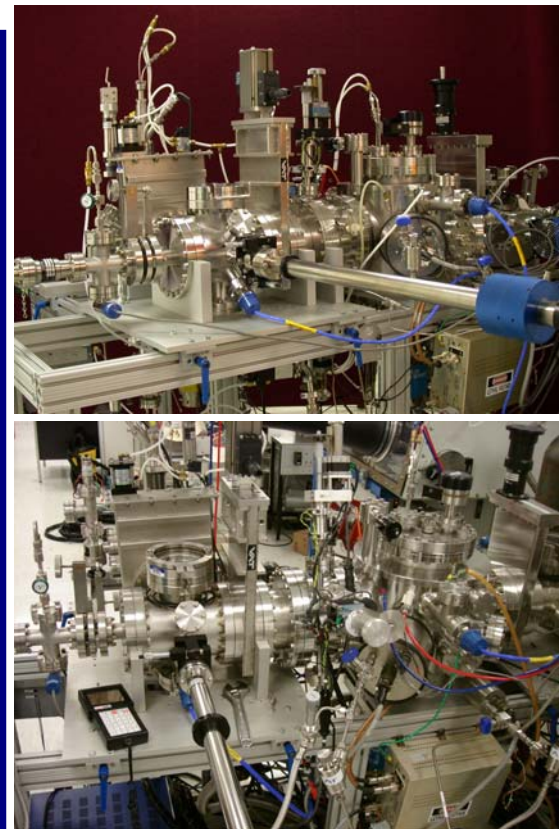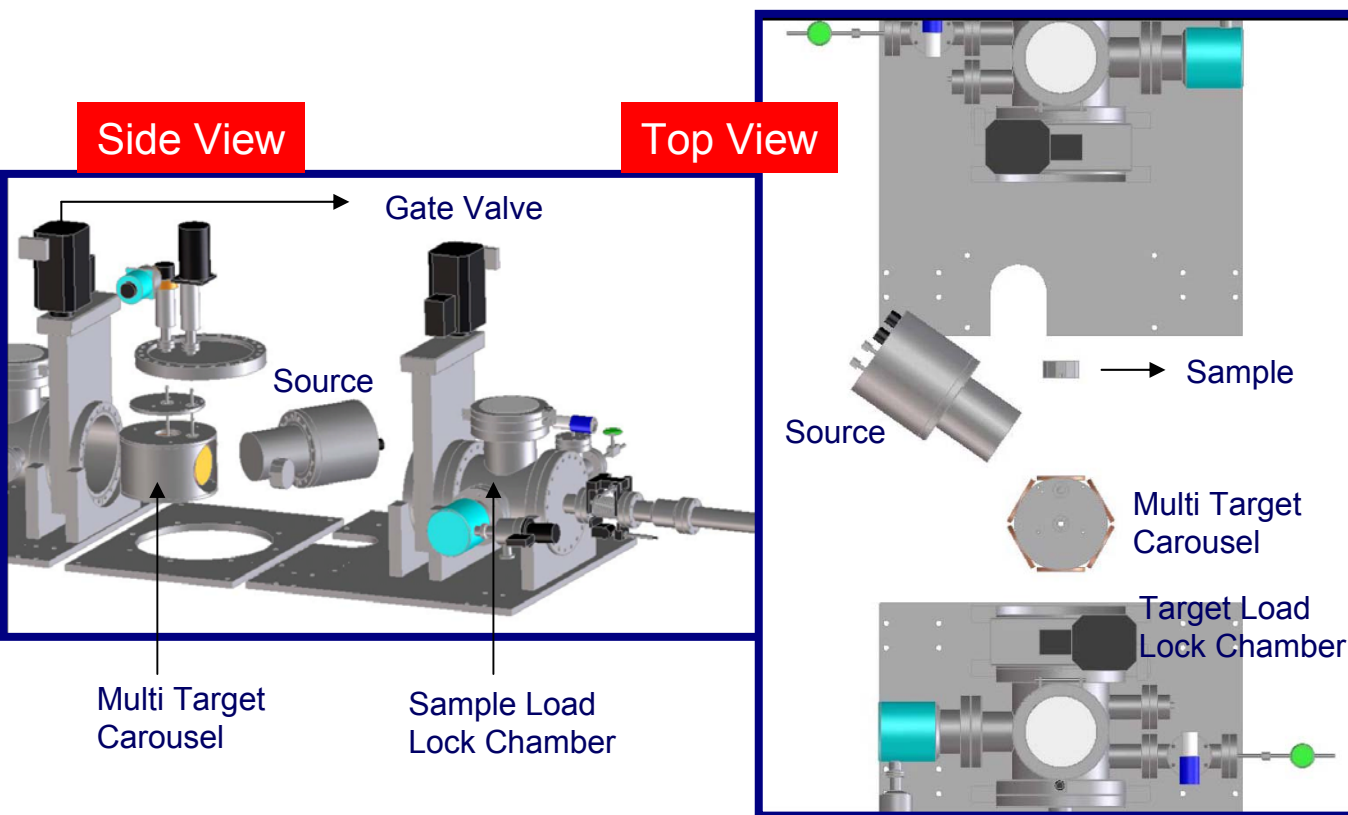

Successful identification of effective catalysts for $\text{MgH}_2 + \text{Si}$ and $\text{LiBH}_4 + \text{MgH}_2$ systems




Materials grown by CIBS and its Validation



Metal catalyst library, new materials growth and confirmation

- 1) Deposit uniform thin layer of the metal hydride material received from MHCoe partner on desired substrate under inert atmosphere
- 2) Transport to CIBS sample chamber for metal library deposition (alternately, metal library can be grown at the bottom and annealed for alloy formation before applying hydride materials)
- 3) Confirmation of alloy formation on identically grown library by XRD
- 4) For new material synthesis, multiple targets have been used to obtain desired compositional spread.


Typical example of solubility confirmation of $\text{In}_{2-x}\text{Fe}_x\text{O}_3$ materials grown by CIBS

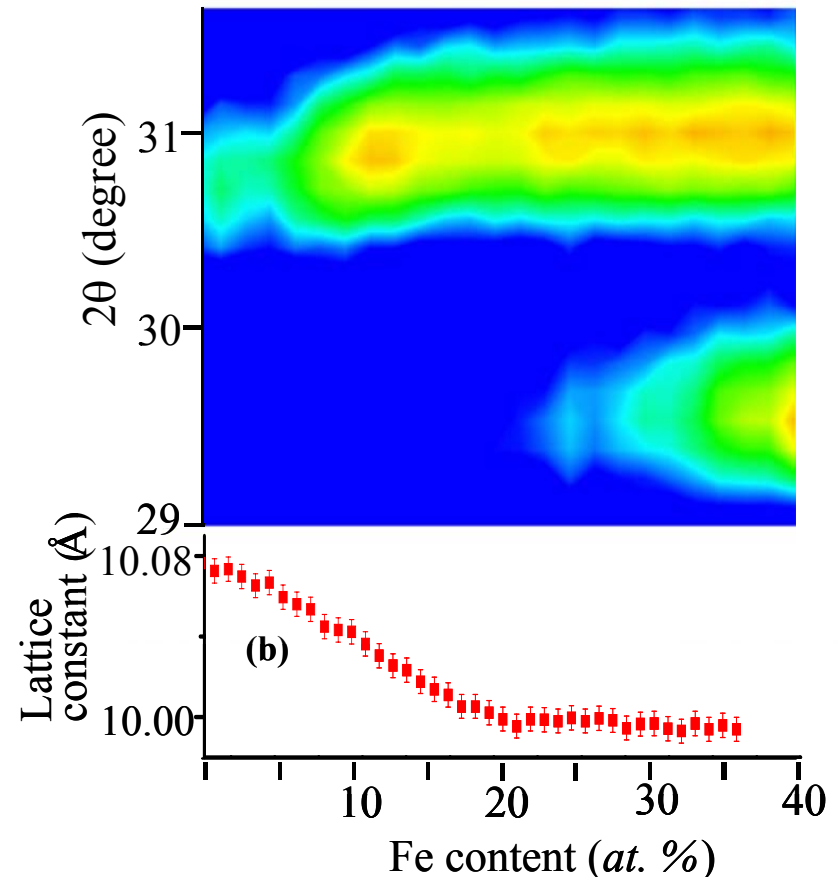


Materials grown by CIBS and its Validation



Compositional confirmation of Mg_2Si system by Rutherford backscattering

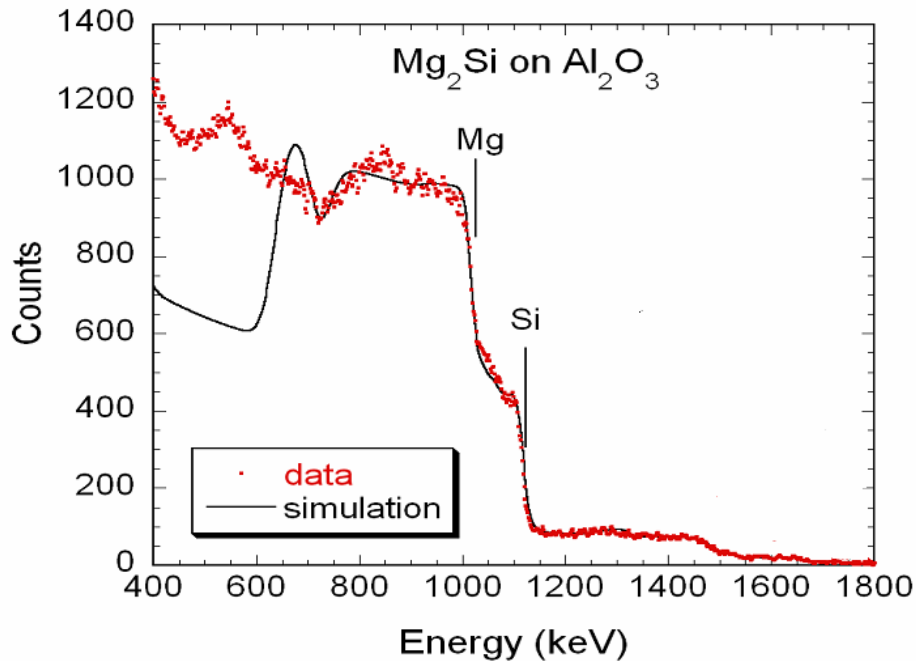

Structural confirmation of formation of Mg_2Si by XRD

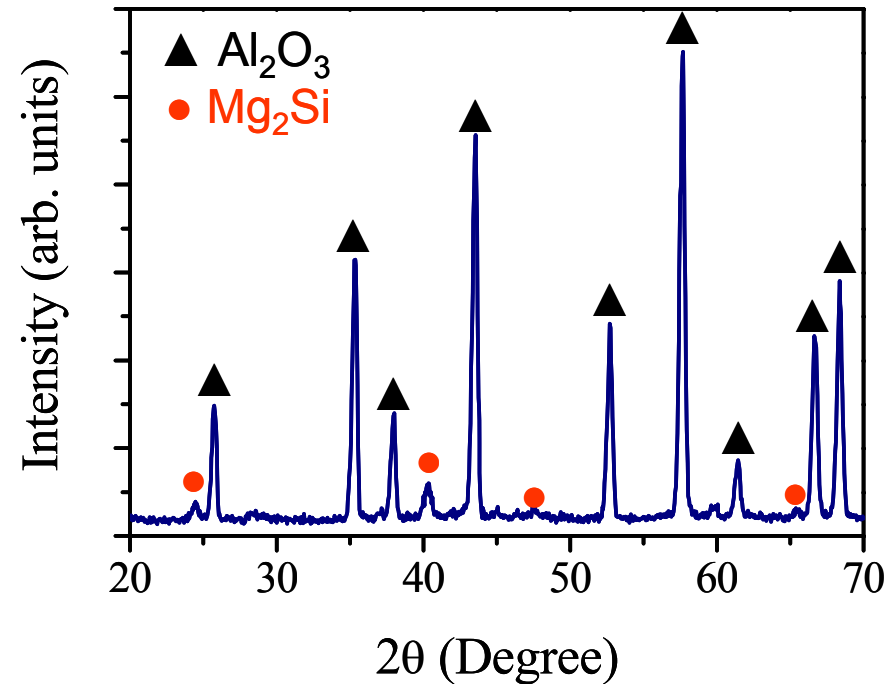

Complementary Synthesis Technique – Combinatorial Nano-particle (CNP) System





Capabilities:

- ❑ Synthesis of nanoparticles of metals, oxides, hydrides, nitrides, carbides, sulfides, etc.
- ❑ Reproducible high crystalline quality nanoparticles with narrow size distribution ($< \pm 30\%$)
- ❑ Synthesis of combinatorial nano-particle libraries with controllable parameters:
 - particle size
 - material composition
 - synthesis conditions
- ❑ System has been validated for bimetal alloy libraries



Typical Example

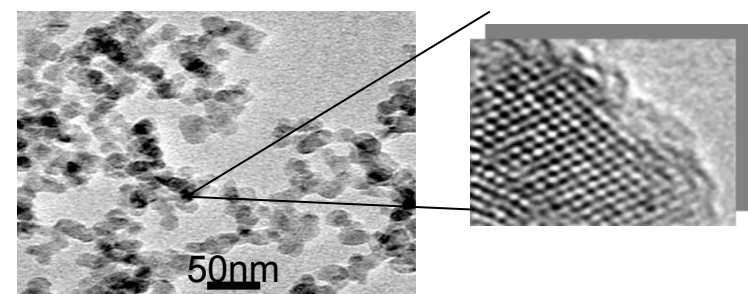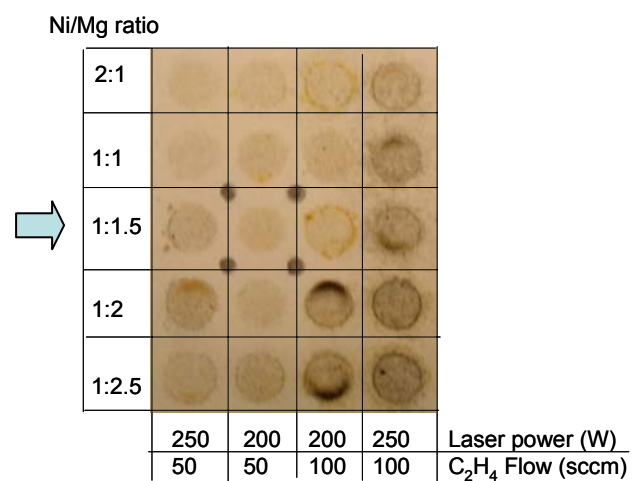

This system has been used to generate Ni particles for Mg₂Si

High Throughput Screening Approach-1



Optical Measurements

- 1) Using high pressure Optical Chamber
- 2) Max. Pressure: 600 psi
- 3) Max. Temperature: 350 °C
- 4) Maximum size: 1.3" x 1.3" sample

Methodology:

At constant pressure:

Observe the change in optical properties of the sample with temperature

At constant temperature:

Observe the of change in optical properties of the sample with pressure


Conclusion:

A change in color at a particular catalyst, indicates that a reaction may have taken place with the sample (lead generated for further catalysis study)

Validation on Mg film



Mg thin film (250 nm)
before
hydrogenation

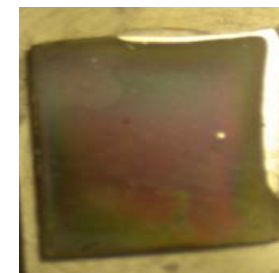


MgH₂ thin film
after
hydrogenation

Limitations: *Max. Pressure: 600 psi; Temperature: 350 °C
Leads require quantitative confirmation by
MHCoe Partner collaboration*






Reflectivity Measurements

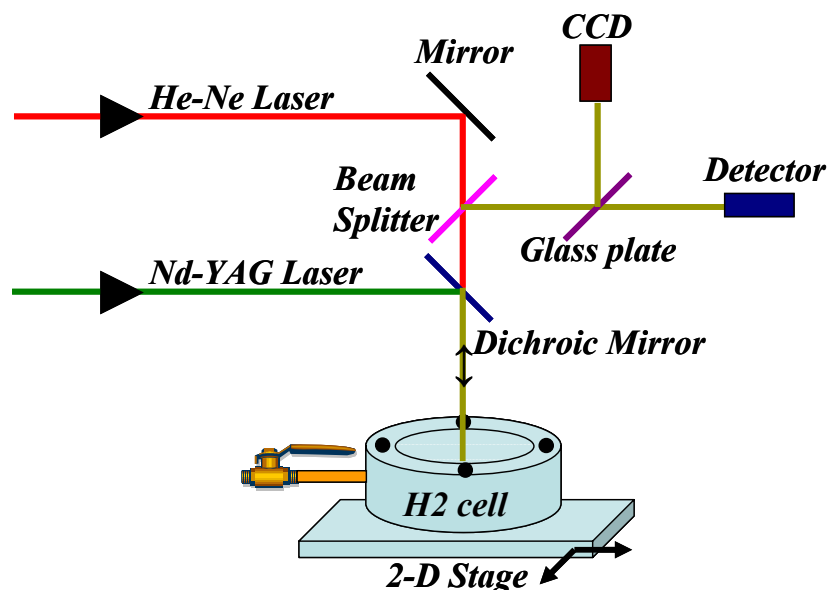

Validation on Mg film

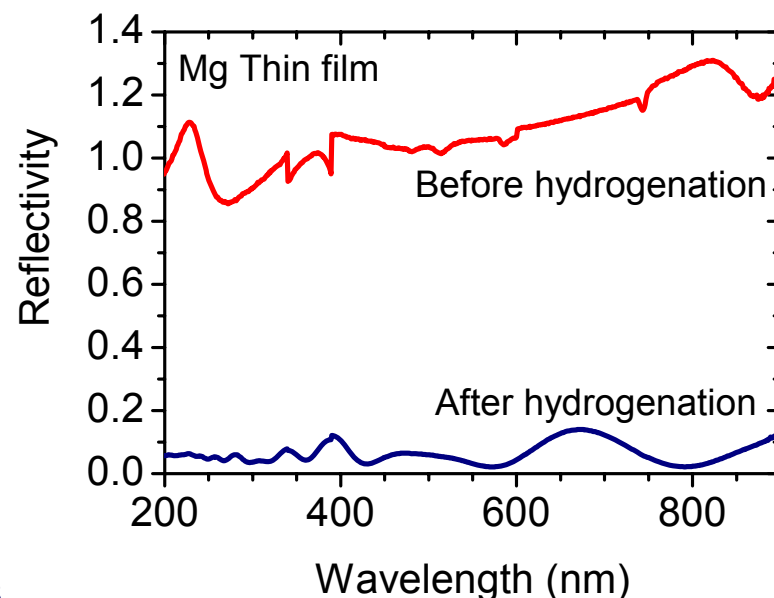





- Hydriding at 350 psi H_2 and 220 °C for 2 hours
- Metallic mirror-like Mg film converts to MgH_2 layer
- Drastic change in reflectivity during hydrogenation



Limitations: Only thin film samples can be measured, not powders.
No on-site high temp./pressure hydrogenation

High Throughput Screening Approach-3

Micro-beam scanning XRD

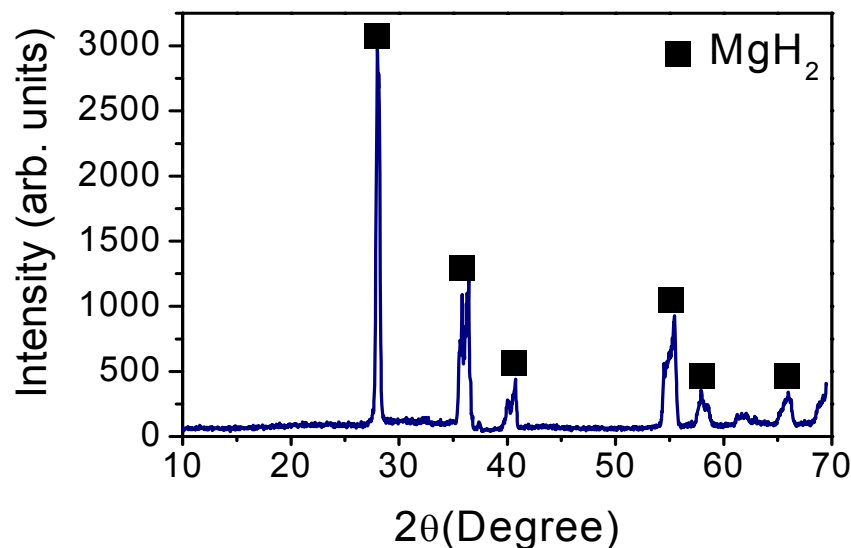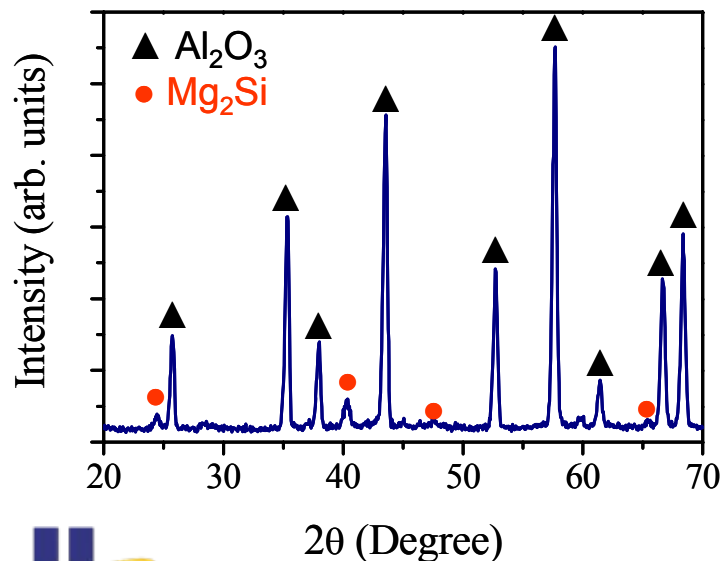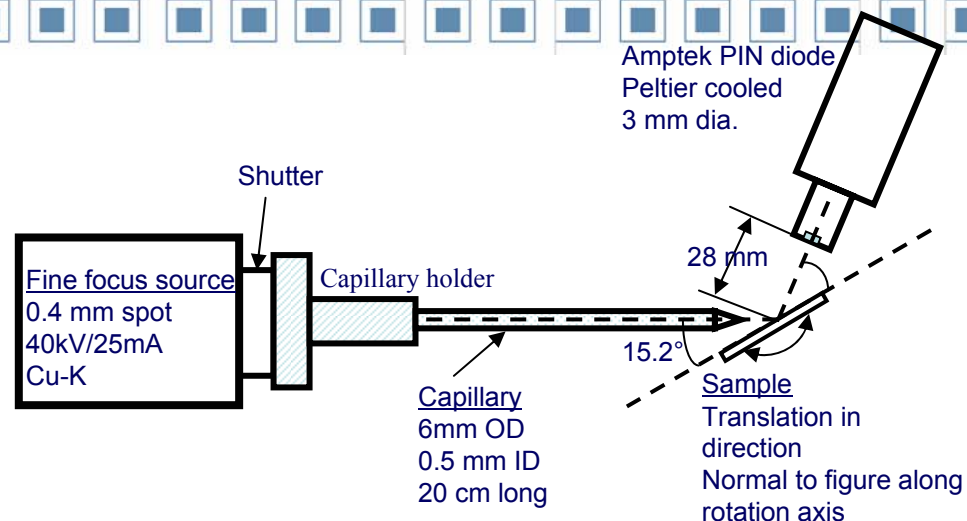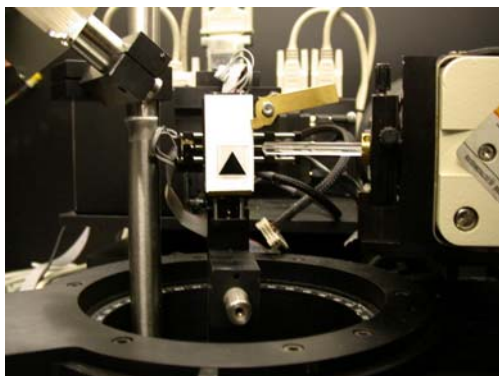

Limitation: *Not configured for highly air sensitive materials*

- Ball-milled $\text{MgH}_2 + \text{Si}$ mixture without catalyst was obtained from HRL.
- The mixture was applied to a substrate without changing morphology or particle size. Catalysts were synthesized on the mixture.
- Under Ar atmosphere, the catalysts and hydride material were transferred to a reactor cell fitted with an optical window.
- For each catalyst library, three experiments were carried out.
 - Under conditions used by HRL, hydride materials with known catalyst were heated. The temperature profile of optical property variations matched previously reported results well.
 - ✓ *This supports the validity of the screening methodology.*
 - In a second experiment, catalyst libraries were heated at 5 °C/min up to 350 °C in 1.5 atm H_2 . The optical properties of libraries were monitored; but no changes (recharge) were observed.
 - In a third experiment, the samples were heated under Ar at 3 °C/min up to 170 °C and then at 1 °C/min up to 250 °C. Temperature was held at 250 °C for 20 minutes before cooling. Of the catalysts screened, a few showed obvious changes in optical properties.

- The temperature and pressure was varied widely from high to low to moderate for more experimental results.
- Catalyst screening for Mg_2Si hydrogenation was also performed. More than 20 catalysts were screened e.g., Mn, Ni, Ti, V, Cr, Nb, Pt, etc. and combinatorial alloys of the same.
 - *Unfortunately, none of the catalysts screened were found to be effective for hydrogenation of the material system.*
- *Without rehydrogenation – system is NO-GO.*
- *Methodology for catalyst screening validated by ‘rediscovery’ of known catalyst as well as discovery of a new, better catalyst.*

Intematix is using a similar strategy for the $\text{LiH} + \text{MgB}_2$ system and will continue to use this methodology for new metal hydride systems received from MHCoe partners







































Results-Catalyst Screening for $\text{MgH}_2 + \frac{1}{2} \text{Si}$




Optical Properties:

Color changes of catalysts during high temperature/pressure dehydrogenation reaction suggests catalytic effect.

	25 °C	140 °C	180 °C	190 °C	210 °C	260 °C	300 °C	320 °C	350 °C
Ni									
Mn									
Cu									
Fe									

- Reproducibility confirmed
- Screened Catalysts (~ 50 catalysts)

- 
- 1) 1st row transition metals
 - 2) Some 2nd row transition metals
 - 3) Combinational libraries of 1) and 2)

Catalysis screened: Ni, Mn, Cr, Fe, Ti, Nb, Pt, V, Cu, and alloys of all.

Cu and Fe NOT effective


Most Effective Catalysts: Ni and Mn

HRL has confirmed these results with their own experimental work



Hydrogen Desorption Results

MgH₂/Si + Catalyst

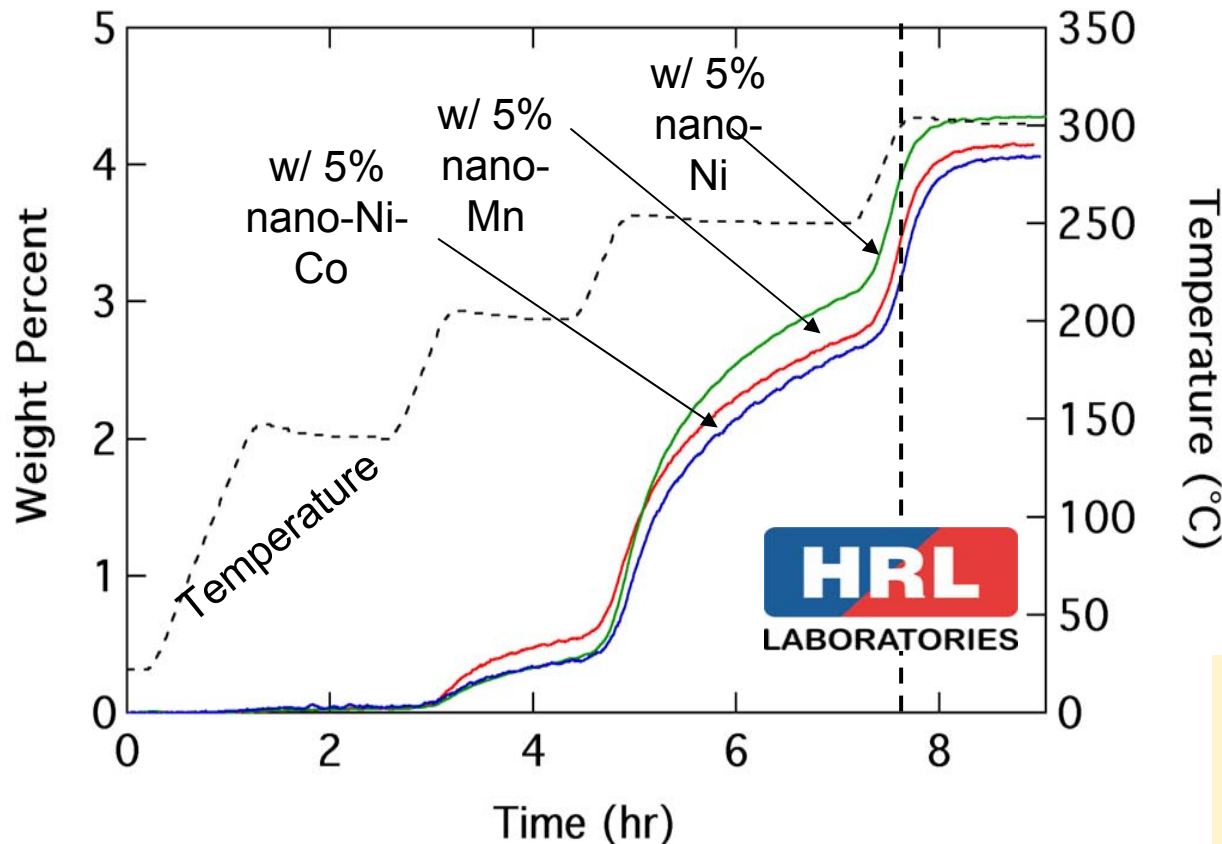

- Ramping rate of 3 °C/min with dwelling time at intermediate steps (Intematix).
- A similar approach was used by HRL: 2 °C/min.
- Pure MgH₂ + Si takes longer for onset of decomposition (approx. 7.5 hrs – shown by dashed line)

Nano-Mn, Ni and Ni-Co give similar enhancements for dehydrogenation







Results-Catalyst Screening for LiH + MgB₂



Strategy

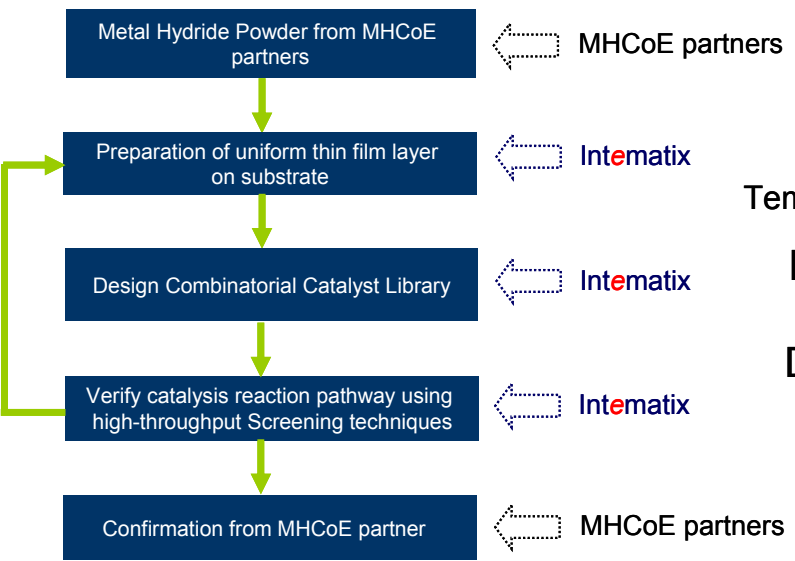

Color changes of catalysts during high temperature/pressure reaction suggest catalytic effect

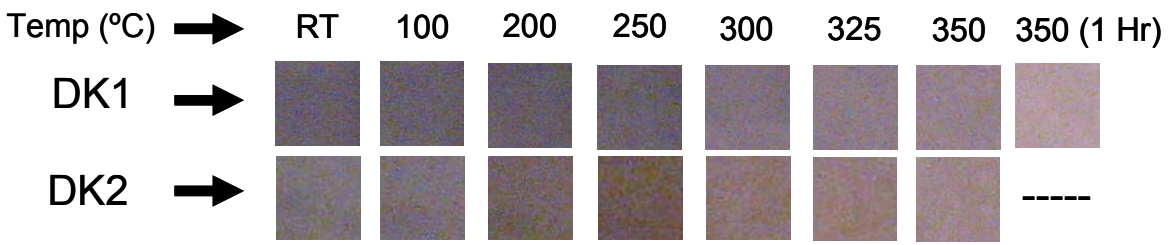

Effective Catalysts: DK1=pure metal, DK2=alloy

More catalyst screening is underway, desorption/sorption experiment will be carried out with HRL by end of this Year

Future Work

- Continue combinatorial *catalyst screening* for the $\text{LiH}+\text{MgB}_2$ system after further characterizing the current catalyst library in collaboration with HRL. (*through December 2007*)
- Try to understand HRL's observation that $\text{LiBH}_4+\text{MgH}_2$ melts during dehydrogenation by using Intematix's tools. It has been realized that starting with this mixture for desorption does not give good reversibility because LiBH_4 melts. (*August 2007*)
- Perform complementary characterization techniques such as *in-situ* XRD, Raman spectroscopy and high-temperature/high-pressure testing of metal hydride thin films in collaboration with SNL. (*through March 2008*)



Future Work

- Synthesis of $\text{Ca}(\text{BH}_4)_2$ thin films and catalyst screening using Combinatorial Sputtering technique. However, prior to that, it is important to determine the reaction kinetics for the hydrogen desorption from $\text{Ca}(\text{BH}_4)_2$ in bulk. (*through March 2008*)
- Combinatorial synthesis and search of catalysis for new complex metal hydride materials. (*through September 2008*)



Summary

Goal:

Identify catalysts which improve the kinetics and selectivity for desired metal hydride systems to enable an on-board hydrogen storage system which meets DOE 2010 targets.

Approach:

Combinatorial nano-catalyst synthesis and high throughput screening to speed up catalyst discovery.

Technical Accomplishment and Results:

- (1) Improvement in design, setup and validation of combinatorial nano-catalyst synthesis and high throughput catalyst screening processes.
- (2) Ni and Mn were found to be the most effective catalyst for $\text{MgH}_2 + \text{Si}$ system for dehydrogenation. But, NO Reversibility. So, NO-GO system.
- (3) Identified a few alloy leads which appear to improve kinetics of $\text{LiH} + \text{MgB}_2$ system. But more catalyst screening is necessary for further improvement.

Proposed Future Research:

Continue high throughput screening of catalysts for $\text{LiH} + \text{MgH}_2$ and other candidates systems such as $\text{Ca}(\text{BH}_4)_2$. Optimize & improve synthesis and screening methods.

Improved catalyst measurement sensitivity (using laser reflectivity).

More characterization and synthesis utilizing customized equipment built at Intematix.

